

## Talent GT01 Color Display Clip-On Guitar Tuner with Rubberized Finish


### TUNER FEATURES

Thank you for choosing the Talent GT01 Color Display Tuner! The frequency range detected by the GT01 is optimized for all instruments, including Guitar, Bass, Violin, and Ukulele. This chromatic tuner senses the vibrations of the instrument to which it is attached.

### ATTACHING THE TUNER TO YOUR INSTRUMENT

- Use the clamp to attach the tuner to your instrument. Take care to avoid damaging your instrument's finish. Do not attach the tuner to your instrument if any of the tuner's rubber pads are broken or missing,
- For guitars, attach the clamp to the headstock (placing the body of the tuner either in front of or behind the headstock). For other instruments, find the location that provides the best sound pick-up while allowing you to view the display easily.
- After attaching the tuner to your instrument, adjust the arm that connects the tuner to the clamp, for optimum viewing of the tuner's color display.

### APPEARANCE AND SKETCH

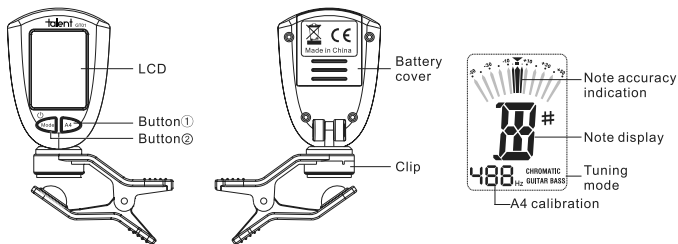

### POWER UP

- Once you have attached the tuner to your instrument or music stand, turn it on by pressing the power switch on the tuner's face.
- The tuner defaults to the tuning reference of A = 440 Hz. To set to another tuning reference, push the "A4" button on the front of the tuner and press the button again to choose a new tuning reference. The pitch reference can be set anywhere from 430 Hz to 450 Hz. The tuner will record A4 automatically whenever the tuner is turned off. To reset the tuner to A = 440 Hz, remove and reinstall the battery.

## TUNING

- The GT01 tuner is now ready to help you tune your instrument. As soon as you play a note, the tuner's needle display will use different colors to indicate the note you are playing and how close to pitch you are. The needle pointing to the left (yellow-colored) side of the display indicates flat, while pointing to the right (red-colored) side of the display indicates sharp.
- You are in tune if the needle points to the meter's blue-colored center.
- When the tuner is in Chromatic mode, you can deal easily with non-standard tunings. It will read any note you play!

## POWER SAVE FEATURE

If no notes are detected for three minutes, the GT01 tuner will shut off automatically.

## SPECIFICATIONS

1. Tuning mode: Chromatic/Guitar/Bass
2. A4 calibration: 440 Hz
3. Tolerance:  $\pm 1$ cents
4. Power: 3V CR2032 battery (one piece)

## BATTERY REPLACEMENT

When opening the battery cover, please pay attention to the positive and negative faces of the 3V CR2032 battery. If the tuner's operation stops or becomes erratic, please remove and re-install the battery, which should cause the tuner to resume normal operation.

## CAUTION

Leaving the tuner attached permanently to the instrument for an extended period of time could mar the finish. We recommend removing the tuner from the instrument after you finish playing.

**talent**  
pro audio cables & stands

[www.talentaudio.com](http://www.talentaudio.com)