

1. Open Box

The speaker adopts fine packing material to protect it from damage during shipping. In the box, you should find :


- Two S3W satellite speakers
- S3W external volume control
- Power cable
- Audio signal cables
- Product manual

2. Speaker Placement

The distance between each speaker should be in the range of 70 cm and they should be roughly angled in towards the primary listening position. While the speakers can be placed much closer together separating them to this degree is recommended to create accurate and natural sound field. Adjust the angle and distance of each speaker to your liking until optimal sound accuracy and imaging is achieved.

3. Connecting your Speakers

1). Wiring diagram

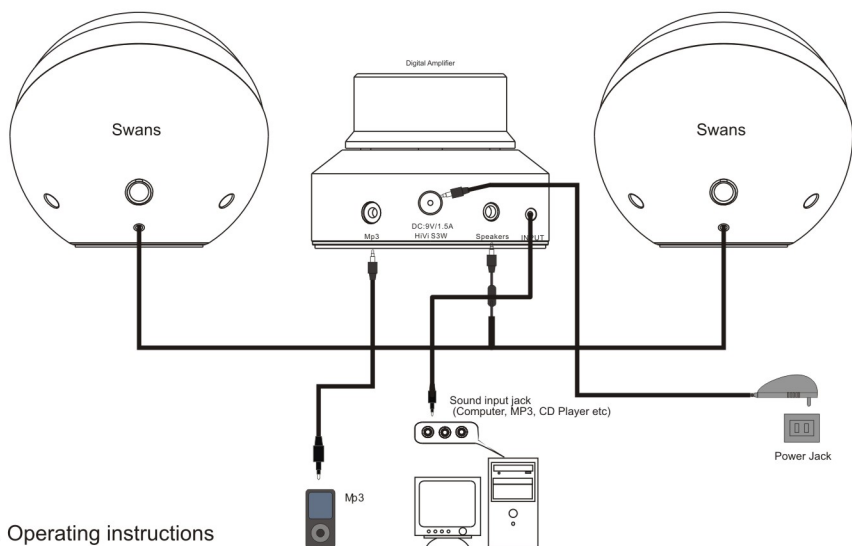

2). Operating instructions

a. Speaker connection

Insert the white mini-stereo jack leading from the speakers into the "SPEAKER" socket in the back of the volume control dial. Notice: be sure to insert the jack completely to avoid influencing the sound quality.

b. Connect the speaker with the computer or other equipment

There is an INPUT socket on the digital amplifier, insert the red mini-stereo jack to the output terminal of the computer sound card or to other equipment (e.g.: DVD, VCD, and CD).

c. Power connection

First, set the digital amplifier to be off, then take out the provided power adapter, insert the DC pin to the DC socket of the digital amplifier and then connect with power outlet.

d. Please check above steps carefully and make sure the connection is correct.

4. Maintenance

S3W Multimedia system can be operated under normal conditions without requiring any maintenance. Avoid using any corrosive liquids or gases on the surface of the cabinet or on the speaker drivers. Do not place in high temperatures, moist conditions, or sunshine for long periods of time. For cleaning be sure to use a detergent without any strong chemicals.



Avoid magnetizing disturbance



Do not place it under the sunshine for a long time



Do not place it in the high temperature or moist place for a long time



Do not touch the driver by your hands



Avoid corrosive liquid and gases

5. Trouble shooting

1). Problems with sound quality

- a. Please check and make sure all drivers have sound or not? Is there any problem with the speaker?
- b. Please check whether the audio signal cable is connected securely with the output terminal of the computer sound card?

2). No sound at all

- a. Please check if the power cable is connected well? Is the power on or off?
- b. Is the audio signal cable from your computer damaged or not connected with your computer sound card?
- c. Please check your computer sound card driver .

3). Only one speaker has sound

- a. Please check if the audio signal cable is connected well?
- b. Please check if the audio signal cable is short circuit?
- c. Please check the volume control and balance settings on your computer .

6. Specification

Amplifier Power Output: 5W x 2

Amplifier signal-to-noise: 80 db

Input Impedance: 33K Ω

Driver Unit: 3"full range, direct current impedance 8 Ω

Dimension (W*H*D mm): 122x122x110

Amplifier Dimension: 70x53x70

Distortion: THD<0.05% (8 Ω , 1KHz, 1W)

Input Sensitivity: 300Mv

Weight: 0.6 kg

7. Warranty

If the problems still exist, please contact the local dealer to handle it. No matter where you purchase HiVi's product, you could enjoy our Universal Customer Service System (UCSS).